

## Personal PIN Setting from sy210 controller panel

<b>Login Step</b>		
Enter key	LCD display	Reference
MENU	System	
EN	Login	
EN	Password	Wait for password enter
1+2+3+4+EN	Master OK	Setup light flashes, already in login status

<b>Add card</b>		
Enter key	LCD display	Reference
MENU	System	
▼	Card	
EN	Add Card Process	
EN	Add Card By Serial	Automatically sort add card module (annotate)
EN	Ins Card	Waiting for proximity un-gotten card
Proximity un-used card	Ins Card [0001]	First time enter card sort from 0001, serial proximity new card will automatically increase card number.
Proximity using card	Ins Card Card Use	If card has been used, the screen will display suggest message
CLR *2	Add Card Process	Leave automatically add card mode
▼	Modify one card	
EN	Card No : 0001	
EN	Status setting	

▼*2	PIN Setting	
EN	PIN Set (yes)	Select yes item
EN	PIN SET : XXXX	Enter Personal PIN 4 code
CLR *3	CARD	
▼	Time Zone	
EN	TIMER TABLE	
EN	TIMER : 01	
EN	TIMER : 01 Sta 08:00	
EN	TIMER : 01 Sta 12:00	
EN	TIMER TABLE	
▼	Time Zone Table	
EN	Time Z :01	
EN	Time Z :01 01+00+00	
EN	Time Zone Table	
▼	Set APP Set	
EN	Set : 01 (group)	
EN	APP Set Week TZ	
EN	Week TZ : 1	
EN	Week TZ : 01 TZ: 01O:1	
EN	APP Set Week TZ	
▼*3	APP Set Personal	
EN	P Door : 1	

EN	P Door : 1 TZ:01 O:0	
EN	APP Set Personal	
CLR*3	Setting OK	