


Case 1: MDNET-1 connect with SYRDT2 or other SYRIS readers. Please **uncheck** the function Delimiter 1 first.

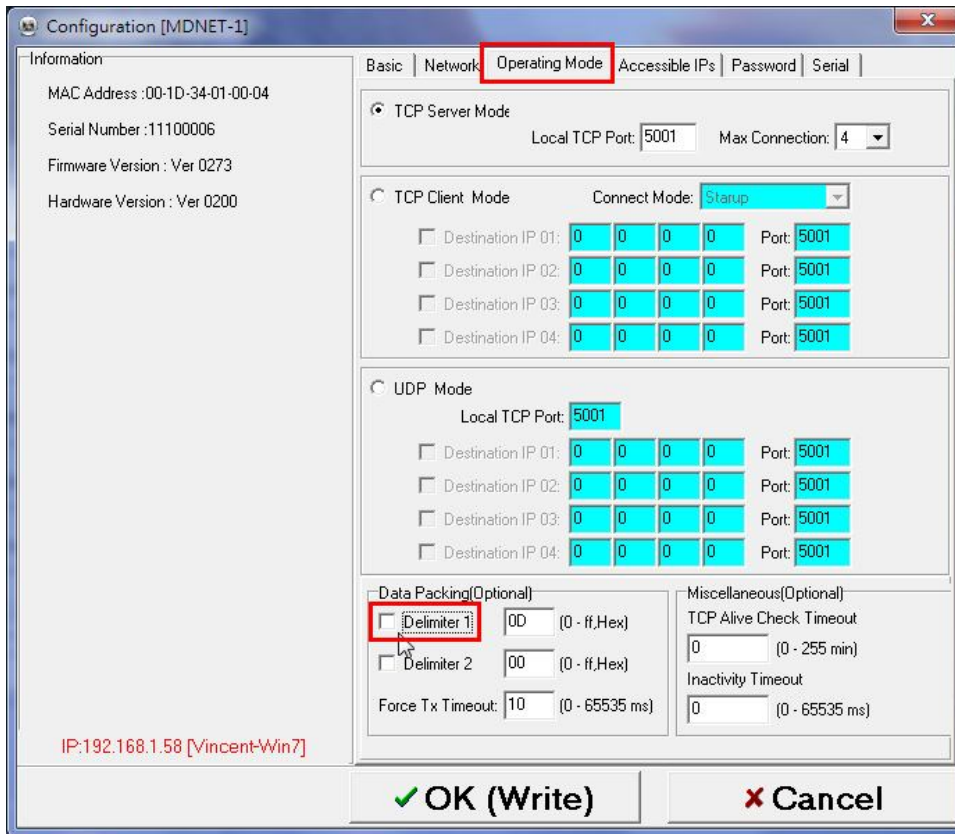

Case 2: Please recover the setting as checked while we need use MDNET-1 as Ethernet converter only.

